






1. Align the top edge of the backplate parallelly to the ground.

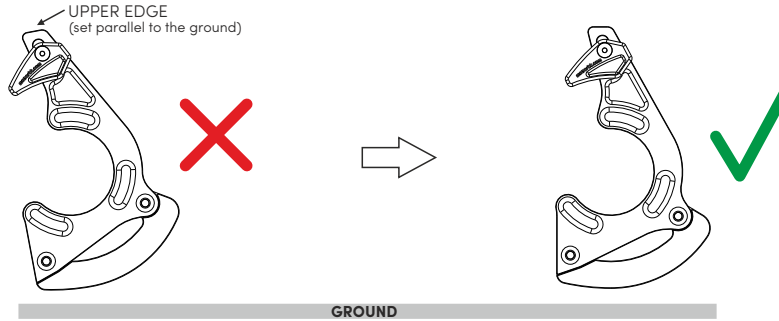

2. Using the provided spacers, put them between backplate and ISCG tabs so the chainring is centered in the upper guide plate.

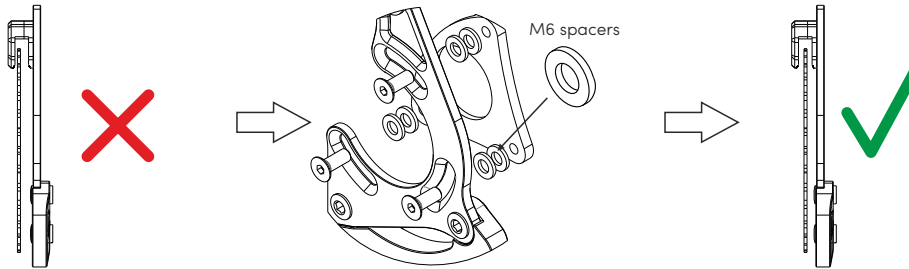

3. Set the guide plate, so it covers the chain, and chainring tooth.

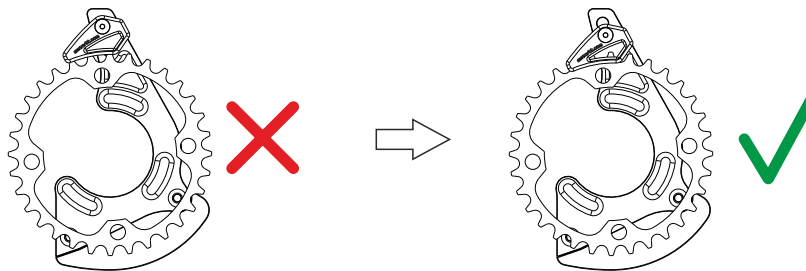

4. enjoy riding!